


Basic Cold-Mount® Procedure


Mounting a Print to an Adhesive Coated Board



1
Peel release liner about 1-½" from top of coated substrate. Crease release liner.

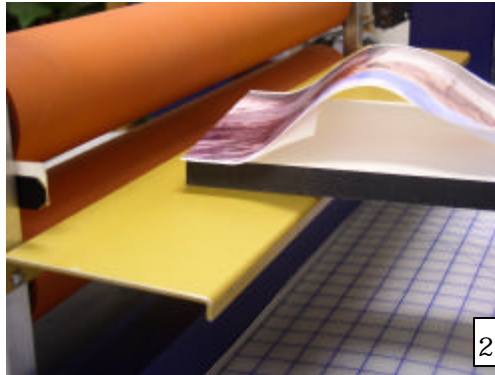

2
Line print up with edges of substrate. Lightly tack print along top ½" of substrate, working from the center out or from one side to the other, without trapping air. (Do NOT press along the crease in the release liner.)

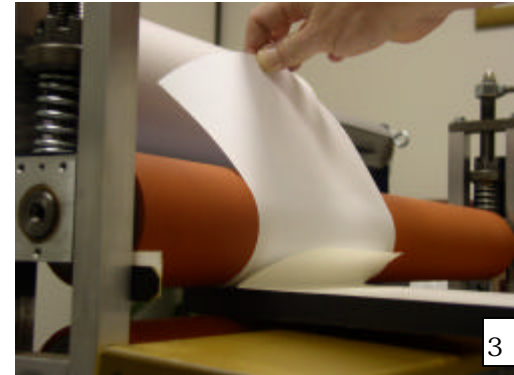


3
Insert tacked end of print about ½" into the laminator. (Do not catch the crease in the release liner between the rollers.) As you start the laminator, hold the print at a 45 degree angle above the top roller.



4
Use hand tension to wrap the print around the top roller. Make sure both edges of the print are tight against the roller to avoid trapped air and wrinkling.



5
Peel off the release liner. Run the print and the substrate through the laminator. Be sure that the print does not flop down on the exposed adhesive.

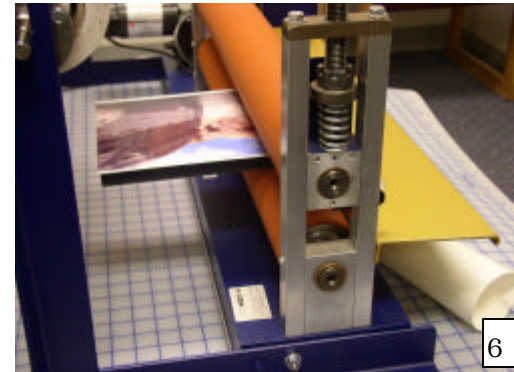

6
After mounting, the print can be placed face down on the cutting mat and trimmed if necessary.



Coda, Inc. • 30 Industrial Avenue • Mahwah, NJ 07430 • Phone: 201-825-7400 • Fax: 201-825-8133

sales@codamount.com www.codamount.com

Cold-Mount ® is a registered trademark of Coda Inc. Featured above: Coda's Cold-Mount ® Laminator; Coda's Stand-Out (3/4" Gatorfoam edged in black)